


Press **8 8 8 8** → **MAIN MENU**

Audio Assist™ Programming

Audio Assist® is an auditory feedback, main line configuration tool that allows for quick and easy setup of nearly all of the decoder functionality.

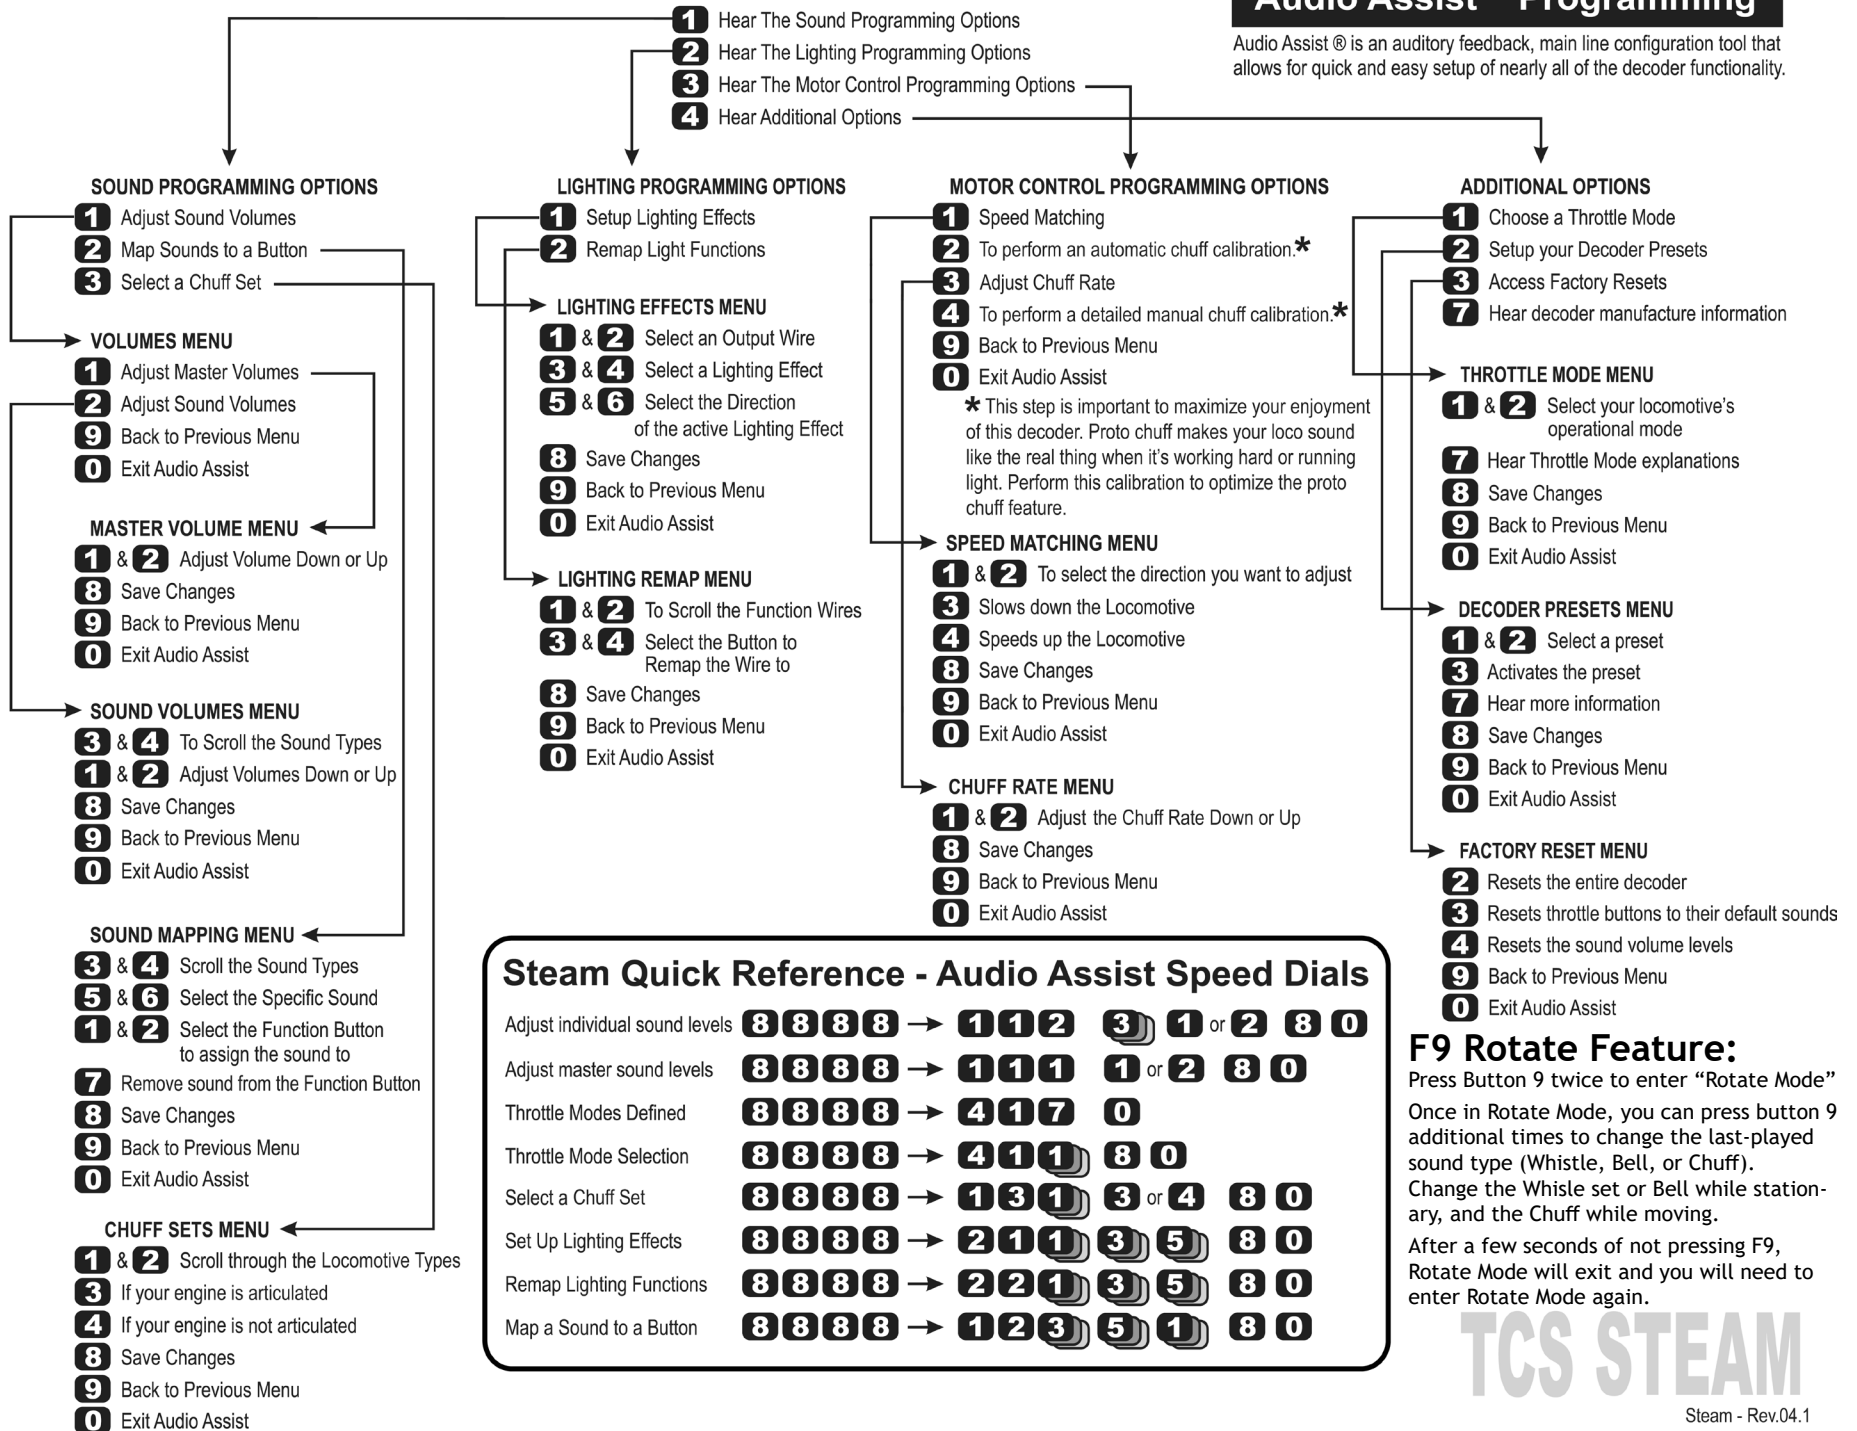

Steam Quick Reference - Audio Assist Speed Dials

Adjust individual sound levels	8 8 8 8 → 1 1 2 3 1 or 2 8 0
Adjust master sound levels	8 8 8 8 → 1 1 1 1 or 2 8 0
Throttle Modes Defined	8 8 8 8 → 4 1 7 0
Throttle Mode Selection	8 8 8 8 → 4 1 1 8 0
Select a Chuff Set	8 8 8 8 → 1 3 1 3 or 4 8 0
Set Up Lighting Effects	8 8 8 8 → 2 1 1 3 5 8 0
Remap Lighting Functions	8 8 8 8 → 2 2 1 3 5 8 0
Map a Sound to a Button	8 8 8 8 → 1 2 3 5 1 8 0

F9 Rotate Feature:

Press Button 9 twice to enter "Rotate Mode"

Once in Rotate Mode, you can press button 9 additional times to change the last-played sound type (Whistle, Bell, or Chuff). Change the Whistle set or Bell while stationary, and the Chuff while moving.

After a few seconds of not pressing F9, Rotate Mode will exit and you will need to enter Rotate Mode again.

TCS STEAM