Main Features of this Decoder

- Back EMF Load Compensation for superior slow speed control even with heavy loads.
- **<u>Quiet Drive</u>** creates SUPER QUIET engine performance.
- <u>Autodetect</u> for realistic throttle response when using DC power.
- **Dimmed Brightness** of bulbs or LEDs is adjustable.
- Variable Momentum lets you make custom acceleration curves.
- <u>Ditch Lights:</u> control alternating ditch lights with realistic pulsing.
- Mars, Gyra, and Rotary Beacon are adjustable.
- <u>Decoder Lock</u> for programming same address decoders independently.
- <u>Function Remapping</u>: 13 buttons for most lights, 7 buttons for operations.
- **Other Features of This Decoder:** This decoder has too many features that could be listed on this page. For the complete list of available features, print out the "Additional Programing Guide" that can be found in the literature section of our website (www.tcsdcc. com). Some of the features include: Function Remapping, 3 Point Acceleration/Deceleration Curves, Button Control of the Motor, Loadable Speed Tables, Various lighting effects, decoder lock and many more.

WARRANTY PROCEDURE: All decoders are covered by a one year goof proof, no questions asked warranty. Please return in a small box.

- 1. You MUST register the failed decoder on our website at <u>www.tcsdcc.com</u>. If you do not have access to a computer you MUST call to register your warranty at: (267) 733-3408
- 2. Print out a copy of the Warranty Registration and include it in the box with the decoder(s).
- 3. Return decoder(s) directly to us using the address below.

Compatible with NMRA DCC standards.

Made by TCS in the USA.


Train Control Systems P.O. Box 341 845 Blooming Glen Rd. Blooming Glen, PA 18911



Phone **215-453-9145** Fax **215-257-0735** Email **tcs@tcsdcc.com** Web **www.tcsdcc.com**




Our Famous GOOF PROOF NO Questions Asked Warranty



Dimensions: 0.661" x 0.969" x 0.193" or 16.79mm 24.61mm 4.9mm

This full featured, 6 function, hardwire or harnessed decoder is a robust workhorse, capable of taking almost anything you can throw at it. Included is our auto-adjusting BEMF for outstanding slow speed performance and hassle free set up. Also includes Quiet Drive for super quiet engine performance.

WIRING DIAGRAM

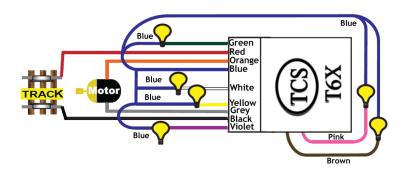

INSTALLATION

For detailed installation pictures visit our website where we maintain a constantly growing database of a wide range of locomotives and decoders.

T6X



BASIC CONFIGURATION

		100	NATION		
CV 29	Con	figu	ration		
Α	0	1	Reverse the direction the engine runs.		
В	2	2	Use 28/128 speed step mode.		
C	4	4	Enable analog (DC) operation.		
D	0	16	Make the Loadable Speed Tables active.		
E	0	32	Make the decoder address 128 or higher.		
CV 29	6		Program the sum of the values you choose into CV 29		
01 27	-				
2 Digit Address Use if the address is 127 or less.					
CV 1	3		Record your choice here.		
4 Digit	۸d	drac	S Make sure 4-digit Addressing is enabled in CV29		
			Record your four digit address here		
<u>CV 17</u>	0	_	Your command station will assign the values of CV 17 and CV1		
CV 18	0				
~ ·					
Consis		lare			
CV 19	0		Use a 2 digit address when in a consist (Multiple units).		
Decod	er L	.ock			
CV 15	0		All unlocked = 0 Decoder to unlock = 1 - 6 All locked =		
CV 16	1		Mobile = 1 Sound = 2 Light Only = 3 4 5 6		
••••	-		ake CV 15 = 0 or CV 15 = CV 16. To lock a decoder, make CV 15 not equal to		
Factor			address decoders, make CV 15 = 7.		
CV 8	15		Inter 2 to perform a Factory Reset.		
CV 0	13.		inter 2 to perform a l'actory Reset.		
			Rule 17 Dimming Options = BEMF OFF Odd number = BEMF ON		
BEMF disabled = 0 BEMF enabled = 1 BEMF button control= 3 Dims when stopped = 16					
	ו on B	EMF ar	nd button control of it make CV 61 = 3 Opposite light dim = 32		
CV 61	1		BEMF and Dimming Control BEMF+Stopped + Opposite dim = 4		
CV 136	1		Function button control of BEMF Bits 0-7 designates buttons 5-12		
CV 64	1		Dimmed Brightness (2 - 6 for LEDs, 12 - 18 for Bulbs)		
CV 10	0)	BEMF Cut Out		
RailCo CV 178 CV 180		0	CV address pointer RailCom® Transmit Options		
CV 181		0	RailCom® Transmit Options		
CV 28		0	Broadcast enable		
			nformation on decoder features or programming visit: .com and check out the Complete Programming Guide .		

MOTOR CONTROL

Speed Graph					
CV 2	0		Start Volts Set the voltage when the throttle is first applied.		
CV 6	0		Mid Volts Set the voltage when the throttle is at midpoint.		
CV 5	0		Top Volts Set the voltage when the throttle is at full speed.		
Momentum					
CV 3	1		Acceleration Larger values add time to each speed step.		
CV 4	1		Deceleration Larger values add time to each speed step.		
CV 23	0		*Acceleration Adjustment when in Consist		
CV 24	0		*Deceleration Adjustment when in Consist		
*Values above 128 increase the adjustment * Values below 128 decrease the adjustment					
Motor Trim					
CV 66	0		Forward Trim	Values above 128 increase speed,	
CV 95	0		Reverse Trim	values below 128 decrease speed.	

LIGHTING CONTROL

Lighting Features

Light Function Wires				
CV 49	0	White Wire	F0F	
CV 50	16	Yellow Wire	FOR	
CV 51	32	Green Wire	F1	
CV 52	32	Violet Wire	F2	
CV 53	32	Brown Wire	F3	
CV 54	32	Pink Wire	F4	

Rule 17 Dimming Control

Rule 17 Dimming is turned on and off by button 4 as the default, but this value can be remapped via CV 123. See the Function Remapping guide on the literature section of www.tcsdcc.com for more info.

Light Effect	fwd	rev	both
Constant Bright Light	0	16	32
Random Flicker (fire box) 1	1	17	33
Mars Light	2	18	34
Flashing Light	3	19	35
Single Pulse Strobe 1	4	20	36
Double Pulse Strobe 1	5	21	37
Rotary Beacon	6	22	38
Gyra Light	7	23	39
Rule 17 (dimmable light)	8	24	40
Ditch Light (Left or Right)	10	26	42
Ditch Light (Other side)	11	27	43
Constant Dim 1	12	28	44
*Auto-Mars	13	29	45
Brake Light(s)	14	30	46
Single Pulse Strobe 2	15	31	47
Double Pulse Strobe 2	64	80	96
Random Flicker 2	65	81	97
Constant Dim 2	66	82	98
Constant Dim 3	67	83	99
Constant Dim 4	68	84	100

Consist Lighting Control

CV 21	0	Extra Functions	Green and Purple wire = 3		
CV 22	0	Headlight Functions	White and Yellow Wire = 3		
Lighting Quick Presets					
CV 8	10	Program a value of 10 to make violet and green ditch lights. Button 1 turns them on and Button two makes them blink.			
	11	Program a value of 11 for default trolley settings.			
	12	Program a value of 12 for standard trolley settings and tail lights.			
Note: For more information on Quick Presets visit the Comprehensive Programming Guide at www.tcsdcc.com					