## Main Features of this Decoder

<u>Back EMF Load Compensation</u> for superior slow speed control even with heavy loads.

- Quiet Drive creates SUPER QUIET engine performance.
- <u>Autodetect</u> for realistic throttle response when using DC power.
- **Dimmed Brightness** of bulbs or LEDs is adjustable.
- Variable Momentum lets you make custom acceleration curves.
- <u>Ditch Lights:</u> control alternating ditch lights with realistic pulsing.
- Mars, Gyra, and Rotary Beacon are adjustable.
- Decoder Lock for programming same address decoders independently.
- <u>Function Remapping:</u> 13 buttons for most lights, 7 buttons for operations.

Other Features of This Decoder: This decoder has too many features that could be listed on this page. For the complete list of available features, print out the "Additional Programing Guide" that can be found in the literature section of our website ( www.tcsdcc. com). Some of the features include: Function Remapping, 3 Point Acceleration/Deceleration Curves, Button Control of the Motor, Loadable Speed Tables, Various lighting effects, decoder lock and many more.

**WARRANTY PROCEDURE:** All decoders are covered by a one year goof proof, no questions asked warranty. **Please return in a small box.** 

- You MUST register the failed decoder on our website at <u>www.tcsdcc.com</u>. If you do not have access to a computer you MUST call to register your warranty at: (267) 733-3408
- 2. Print out a copy of the Warranty Registration and include it in the box with the decoder(s).
- 3. Return decoder(s) directly to us using the address below.

Compatible with NMRA DCC standards.

Made by TCS in the USA.

**Train Control Systems**P.O. Box 341
845 Blooming Glen Rd.
Blooming Glen, PA 18911



Phone 215-453-9145
Fax 215-257-0735
Email tcs@tcsdcc.com
Web www.tcsdcc.com



# Our Famous GOOF PROOF NO Questions Asked Warranty




1	Scale	Functions	Function Rating	Continuous/Peal		
	N	2	100 mA	1.3 /2.0 Amp		

Dimensions: 0.51" x .39" x 0.1" or 12.95mm x 9.9mm x 2.54mm

This full featured, 2 function, drop-in decoder was designed specifically to fit in the Micro-Trains Line, N-Scale SW1500 diesel switcher. With a built-in forward headlight this decoder is a simple drop-in, board replacement. Included is our auto-adjusting BEMF for outstanding slow speed performance and hassle free set up.

## WIRING DIAGRAM

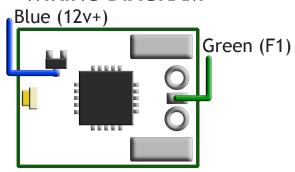

To install this decoder remove the original lighting board and slip the MT1500 into it's location.

## INSTALLATION

For detailed installation pictures visit our website where we maintain a constantly growing database of a wide range of locomotives and decoders.







## **BASIC CONFIGURATION**

CV 29 Configuration					
Α	0	1	Reverse the direction the engine runs.		
В	2	2	Use 28/128 speed step mode.		
С	4	4	Enable analog ( DC ) operation.		
D	0	16	Make the Loadable Speed Tables active.		
Е	0	32	Make the decoder address 128 or higher.		
CV 29	6		Program the sum of the values you choose into CV 29		

2 Digit	Add	ress	Use if the address is 127 or less.		
CV 1	3		Record your choice here.		

4 Digit Address			Make sure 4-digit Addressing is enabled in CV29
CV 17	0	I	Record your four digit address here
CV 18	0	]	Your command station will assign the values of CV 17 and CV18

Consist Address		dress	Add 128 to reverse the loco when in consist.
CV 19	0		Use a 2 digit address when in a consist ( Multiple units ).

## **Decoder Lock**

CV 15	0	All unlocked	l = 0	De	ecoder to unlock	All lo	All locked = 7	
CV 16	1	Mobile = 1	Sour	nd = 2	Light Only = 3	4	5	6

To unlock a decoder, make CV 15 = 0 or CV 15 = CV 16. To lock a decoder, make CV 15 not equal to CV 16. To lock all same address decoders, make CV 15 = 7.

## **Factory Reset**

CV 8 153 Enter 2 to perform a Factory Reset.

## Back EMF and Rule 17 Dimming Options Even number OR 0= BEMF OFF Odd number = BEMF ON

BEMF disabled =0		BEMF enabled = 1	BEMF button cont	rol= 3	Dims when stopped = 16		
Turn	on BEMF	and button control of		Opposite light dim = 32			
CV 61 1 BEMF and Dimming Control				BEA	BEMF+Stopped + Opposite dim = 49		
CV 136	2	Function button control of BEMF			0-7 designates buttons 5-12		
CV 64	15	Dimmed Brigh	ntness	(2-6f	or LEDs, 12 - 18 for Bulbs )		
CV 10	0	BEMF Cut Out					

## RailCom®

1.0011.0011	Tunt Com				
CV 178	0	CV address pointer			
CV 180	0	RailCom® Transmit Options			
CV 181	0	RailCom® Transmit Options			
CV 28	0	Broadcast enable			

For more information on decoder features or programming visit: www.tcsdcc.com and check out the Complete Programming Guide.

Speed	Gra	ph					
CV 2	0		Start Volts Set the	e voltage when the throttle is first applied.			
CV 6	0		Mid Volts Set the	voltage when the throttle is at midpoint.			
CV 5	0		Top Volts Set the	voltage when the throttle is at full speed.			
Mome	Momentum						
CV 3	1			er values add time to each speed step.			
CV 4	1		Deceleration Larger values add time to each speed step.				
CV 23	0		*Acceleration Adjus	tment when in Consist			
CV 24	0		*Deceleration Adjus	stment when in Consist			
*Values ab	ove 1	28 incr	ease the adjustment	* Values below 128 decrease the adjustment			
Motor Trim							
CV 66	0		Forward Trim	Values above 128 increase speed,			
CV 95	0		Reverse Trim	values below 128 decrease speed.			

## LIGHTING CONTROL

Light Function Wires							
CV 49	0	White Wire	F0F				
CV 50	16	Yellow Wire	F0R				

### **Rule 17 Dimming Control**

Rule 17 Dimming is turned on and off by button 4 as the default, but this value can be remapped via CV 123. See the Function Remapping guide on the literature section of www.tcsdcc.com for more info.

Light Lifect	TWU	IEV	DOLLI			
Constant Bright Light	0	16	32			
Random Flicker (fire box) 1	1	17	33			
Mars Light	2	18	34			
Flashing Light	3	19	35			
Single Pulse Strobe 1	4	20	36			
Double Pulse Strobe 1	5	21	37			
Rotary Beacon	6	22	38			
Gyra Light	7	23	39			
Rule 17 (dimmable light)	8	24	40			
Ditch Light ( Left or Right )	10	26	42			
Ditch Light (Other side)	11	27	43			
Constant Dim 1	12	28	44			
*Auto-Mars	13	29	45			
Brake Light(s)	14	30	46			
Single Pulse Strobe 2	15	31	47			
Double Pulse Strobe 2	64	80	96			
Random Flicker 2	65	81	97			
Constant Dim 2	66	82	98			
Constant Dim 3	67	83	99			
Constant Dim 4	68	84	100			
Croon and Durale wire 2						

Light Effect

## **Consist Lighting Control**

CV 21	0	Extra Functions	Green and Purple wire = 3
CV 22	0	Headlight Functions	White and Yellow Wire = 3

## **Lighting Quick Presets**

CV	/ 8	10	Program a value of 10 to make violet and green ditch lights. Button 1 turns them on and Button two makes them blink.	
		11	Program a value of 11 for default trolley settings.	
		12	Program a value of 12 for standard trolley settings and tail lights.	

Note: For more information on Quick Presets visit the Comprehensive Programming Guide at www.tcsdcc.com